



ELPHINSTONE

LARGE EXTENDABLE POLE TRAILER

INSTRUCTION MANUAL




ELPHINSTONE LARGE EXTENDABLE POLE TRAILER

PROCEDURE TO LOCK AND UNLOCK TURNTABLE

1. Turntable lock pin in locked position (required when running empty and whilst loading)

MUST BE REMOVED WHEN LOADED

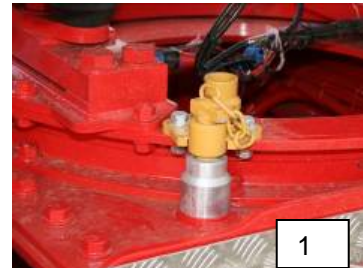


2. Remove lock pin



3. Place in holder




4. When towing empty pole is shortened

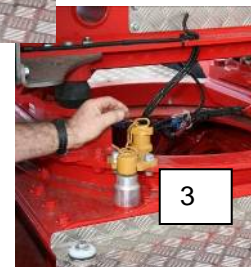


and locked. Cables hooked up on holder
(see separate section for extending pole)
Note – plumbing has changed and is now encased rather than the coil configuration shown

PROCEDURE TO EXTEND POLE

1. Unhook safety chain

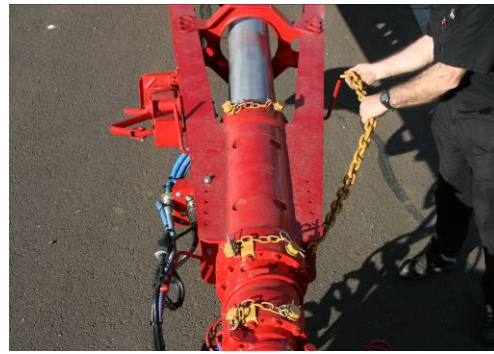

2. Hook safety chain onto it's holder

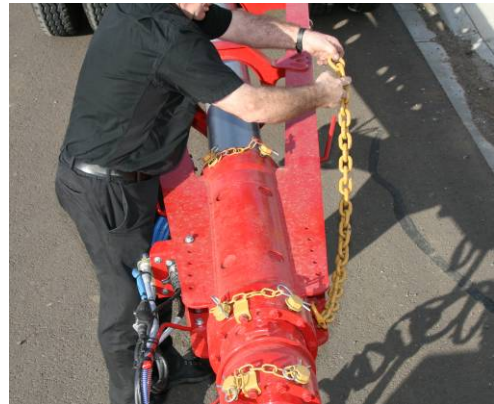

3. Use winch handle located on side of A Frame



4. Remove safety pins. Unlock locking bolts (2) on front of pole carrier

5. Pull out to desired length



If carting shorter poles this section can be used to lengthen and shorten.

As unit turns corners it must have at least 1100 mm free travel it can extend

If carting long poles pull this section out to full length.



Note – original plumbing

When needs to go out long –

Pull main large section pole out until cap on rear end locates in rear of pole carrier

Lock to locking bolts and refit safety pins



Unlock locking bolts in section two and pull out



Note – original plumbing



Plumbing now encased



Need to leave spare cable at front as pole extends when turning corners



When at full length add in inter-connection cable and lash to pole





LONG VEHICLE SIGN

Fold **UP** LONG VEHICLE sign on rear of trailer when trailer is shortened



Fold **DOWN** LONG VEHICLE sign on rear of trailer when trailer is extended



OPERATION OF LANDING LEG



1. In travel position



2. Take weight off leg. Undo locating chain from slot



3. Fold leg down to vertical position



4. Unlock locking pins in extension by operating lever and extend foot down by pushing down with foot.

When on ground release lever and allow pins to lock

Be careful as extension is spring loaded.



5. With handle, wind leg down to lift draw bar.



Use reverse procedure to store.

**BE VERY CAREFUL WHEN RELEASING LOCKS TO
RETRACT EXTENSION AS IT IS SPRING LOADED.
PUT FOOT ON BASE PLATE, RELEASE LOCK AND ALLOW TO RISE SLOWLY**

STRAPPING DOWN POLES

Put two straps over at each bolster






IF ONLY CARTING ONE POLE PLACE
IN CENTRE AND STRAP DOWN WITH
WINCHES ON DOLLY BOLSTERS
(EXTENSIONS)



AIR OPERATED WINCHES

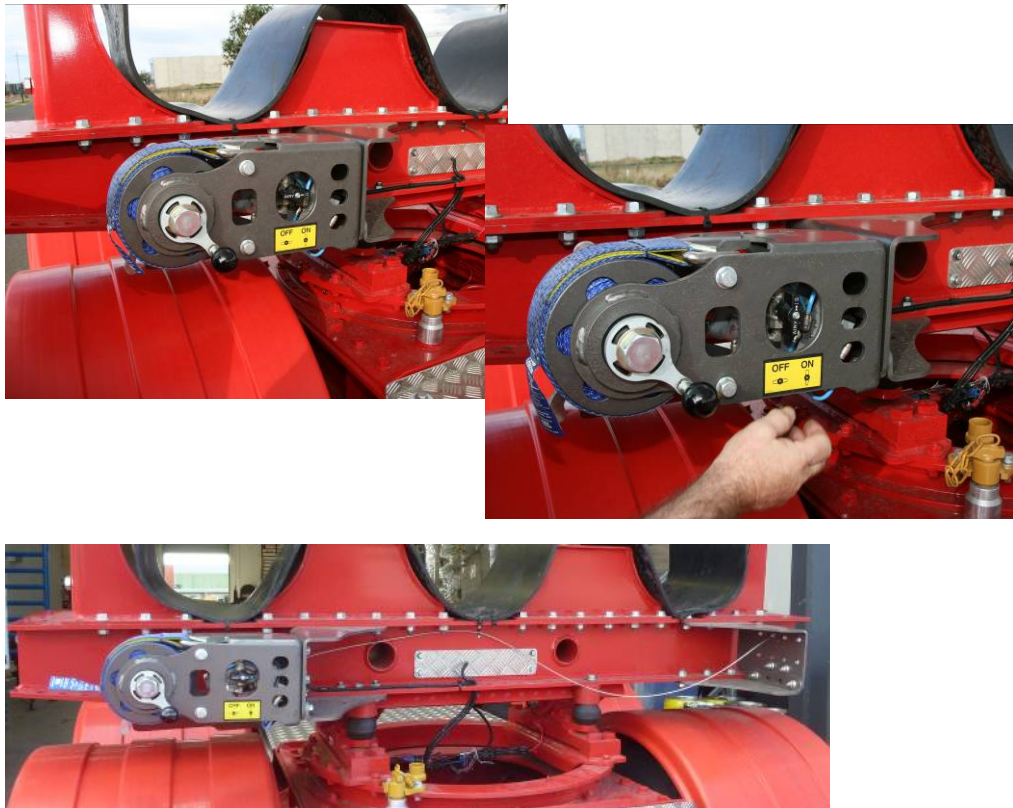

SEE SEPARATE MANUAL



These instructions have been produced taking account of most operating conditions. Operators should be aware that circumstances may require them to exercise additional caution whilst operating these trailers.

NOTE TO OWNERS AND OPERATORS

At Elphinstone Engineering we are proud of the products we design and build and continually strive to improve. We hope that you get productivity, longevity and enjoyment out of using our products.

Our objective is to make our products as safe, practical and user friendly as possible but in our quest to build such products to cope with the conditions and environments that our equipment operates in plus meet all rules and regulations we do rely on you as the operator to use your skills and operate this equipment in a sensible manner.

This manual has been put together to help you operate the unit safely and in the manner it is designed to be used.

If you have any questions about the operation or are unsure of anything contained in the manual please do not hesitate to contact us. We particularly welcome suggestions on how we can improve our units.

Our offices are generally manned from 6am to 6pm 5 days per week and some Saturdays. If the problem is urgent then follow the prompts to get to after hours service. You will normally get one of us 24 hours a day/7 days week.

FREECALL 1800 030 019

TASMANIA
36 Tasman Highway
TRIABUNNA:
Phone: 03 6257 3242

VICTORIA
2/670 Somerville Road
SUNSHINE
Phone: 03 9311 6366

**On behalf of the Elphinstone
Engineering and Elphinstone Weighing
System teams**

Graeme Elphinstone
MANAGING DIRECTOR





ELPHINSTONE TRANSGRID POLE TRAILER

DRIVER INSTRUCTION COMPLETED:

DRIVER'S NAME:

DRIVER'S SIGNATURE:

INSTRUCTOR'S NAME:

INSTRUCTOR'S SIGNATURE:

DATE:

Internet Site: www.elph.com.au